



INTERCOM SPARE PARTS

All components are available as spares to order. However, certain items are often requested as replacement parts, and for convenience, these are listed here.

- 27-871 TECPRO Spare lamp for beltpacks and MS series flash switch
- 27-872 TECPRO Spare lamp for LS3 series flash switch
- 27-879 TECPRO Spare potentiometer for beltpack volume control
- 27-878 TECPRO Spare potentiometer for HS and LS3 series volume control
- 27-881 TECPRO Spare button for beltpack flash switch
- 27-882 TECPRO Spare button for beltpack and MS series mic switch
- 27-883 TECPRO Spare button for MS series flash switch
- 27-884 TECPRO Spare button for PS711 channel switch
- 27-885 TECPRO Spare button for HS and LS3 series flash switch
- 27-888 TECPRO Spare knob for HS and LS series volume control
- 27-889 TECPRO Spare knob for beltpack volume control
- 27-891 TECPRO Spare flash switch for beltpack
- 27-892 TECPRO Spare mic switch for beltpack
- 27-893 TECPRO Spare flash switch for HS and LS3 series
- 27-894 TECPRO Spare mic switch for HS and LS3 series
- 27-895 TECPRO Spare loudspeaker switch for LS3 series
- 27-890 TECPRO Spare channel switch for PS711
- 27-898 TECPRO Spare loudspeaker for LS and MS series
- 27-899 TECPRO Spare rackmount kit for MS series
- 27-880 TECPRO Spare handle for MS series
- 27-897 TECPRO Spare beltpack belt clip
- 27-870 TECPRO Spare bezel for beltpack, black
- 27-092 TECPRO Spare bezel for beltpack, red
- 27-093 TECPRO Spare bezel for beltpack, orange
- 27-094 TECPRO Spare bezel for beltpack, yellow
- 27-095 TECPRO Spare bezel for beltpack, green
- 27-096 TECPRO Spare bezel for beltpack, blue
- 27-097 TECPRO Spare bezel for beltpack, violet